

Diagnostic Trouble Code (DTC)

DTC Erasure (MES Mode)

NOTE: This operation can also be done with the Honda PGM Tester.

1. Connect the SCS service connector to the service check connector (2P) located at the passenger's side of center console.
2. Depress the brake pedal.
3. Turn the ignition switch ON (II) while keeping the brake pedal depressed.
4. After the ABS indicator light goes off, release the brake pedal.
5. After the indicator light comes on, depress the brake pedal again.
6. After the indicator light goes off, release the brake pedal again.
7. After few seconds, the indicator light blinks twice and the DTC is erased. If the indicator light does not blink twice, repeat steps 1 through 6. If the indicator light stays ON after the indicator light blinks twice, check the DTC because a problem was detected during initial diagnosis before shifting to MES mode.
8. Turn the ignition switch OFF, and remove the SCS service connector.

Conditions for DTC erasure

- Vehicle speed is at 6 mph (10 km/h) or less.
- The SCS service connector is connected before the ignition switch is turned ON (II).
- The brake pedal is depressed before the ignition switch is turned ON (II).

