

Systems Description

Electrical Connections [1.5 l]



FUSES

- ① ECU (15A)*
- ② No.14 (10A)
- ③ No.2 (10A)

- ④ No.1 (10A)
- ⑤ HAZARD (10A)*

* : In the main fuse box

