

NOTE:

- ♦ If the doors unlock or lock with the transmitter, but the LED on the transmitter does not come on, the LED is faulty; replace the transmitter.
- ♦ If any door is open, you cannot lock or unlock the door with the transmitter.
- ♦ If you unlocked the doors with the transmitter, but do not open any of the doors within 30 seconds, the doors relock automatically.
- ♦ The doors do not lock or unlock with the transmitter if the ignition key is inserted in the ignition switch.

