

## 2003 ACCORD - Power Window Control Unit Reset

**Resetting the power window is required when any of the following have been removed or repaired**

### Using the HDS

1. Connect the Honda Diagnostic System (HDS) to the vehicle's DLC.
2. Turn the ignition switch ON (II), then enter the vehicle's VIN and mileage at the prompts.
3. Select Body Electrical from the System Selection menu.
4. From the Body Electrical System Select menu, select Power Windows.
5. From the Mode menu, select Adjustments.
6. From the Adjustment menu, select Window P Reset.
7. Follow the prompts on the screen.
8. Confirm that the power window master switch is reset by using the driver's window AUTO UP and DOWN function.

### Resetting the power window

#### Without the HDS

1. Turn the ignition switch ON (II).
2. Move the driver's window all the way down by using the driver's window DOWN switch.
3. Open the driver's door.  
NOTE: step 4-7 must be done within 5 seconds of each other.
4. Turn the ignition switch OFF.
5. Push and hold the driver's window DOWN switch.
6. Turn the ignition switch ON (II).
7. Release the driver's window DOWN switch.
8. Repeat step 4-7 three more times.
9. Wait 1 second.
10. Confirm that AUTO UP and AUTO DOWN do not work. If AUTO UP and DOWN work, go back to step 1
11. Move the driver's window all the way down by holding the driver's window DOWN switch to the AUTO DOWN position.
12. Pull up and hold the driver's window UP switch to the AUTO UP position until the window reaches the fully closed position, then continue to hold the switch for 1 second.
13. Confirm that the power window master switch is reset by using the driver's window AUTO UP and DOWN function.

If the window still does not work in AUTO, repeat the procedure several times, paying close attention to the 5 second time limit between steps. If it still does not work, go to B-CAN System Diagnosis Test Mode A.



