


Clutch Adjustment

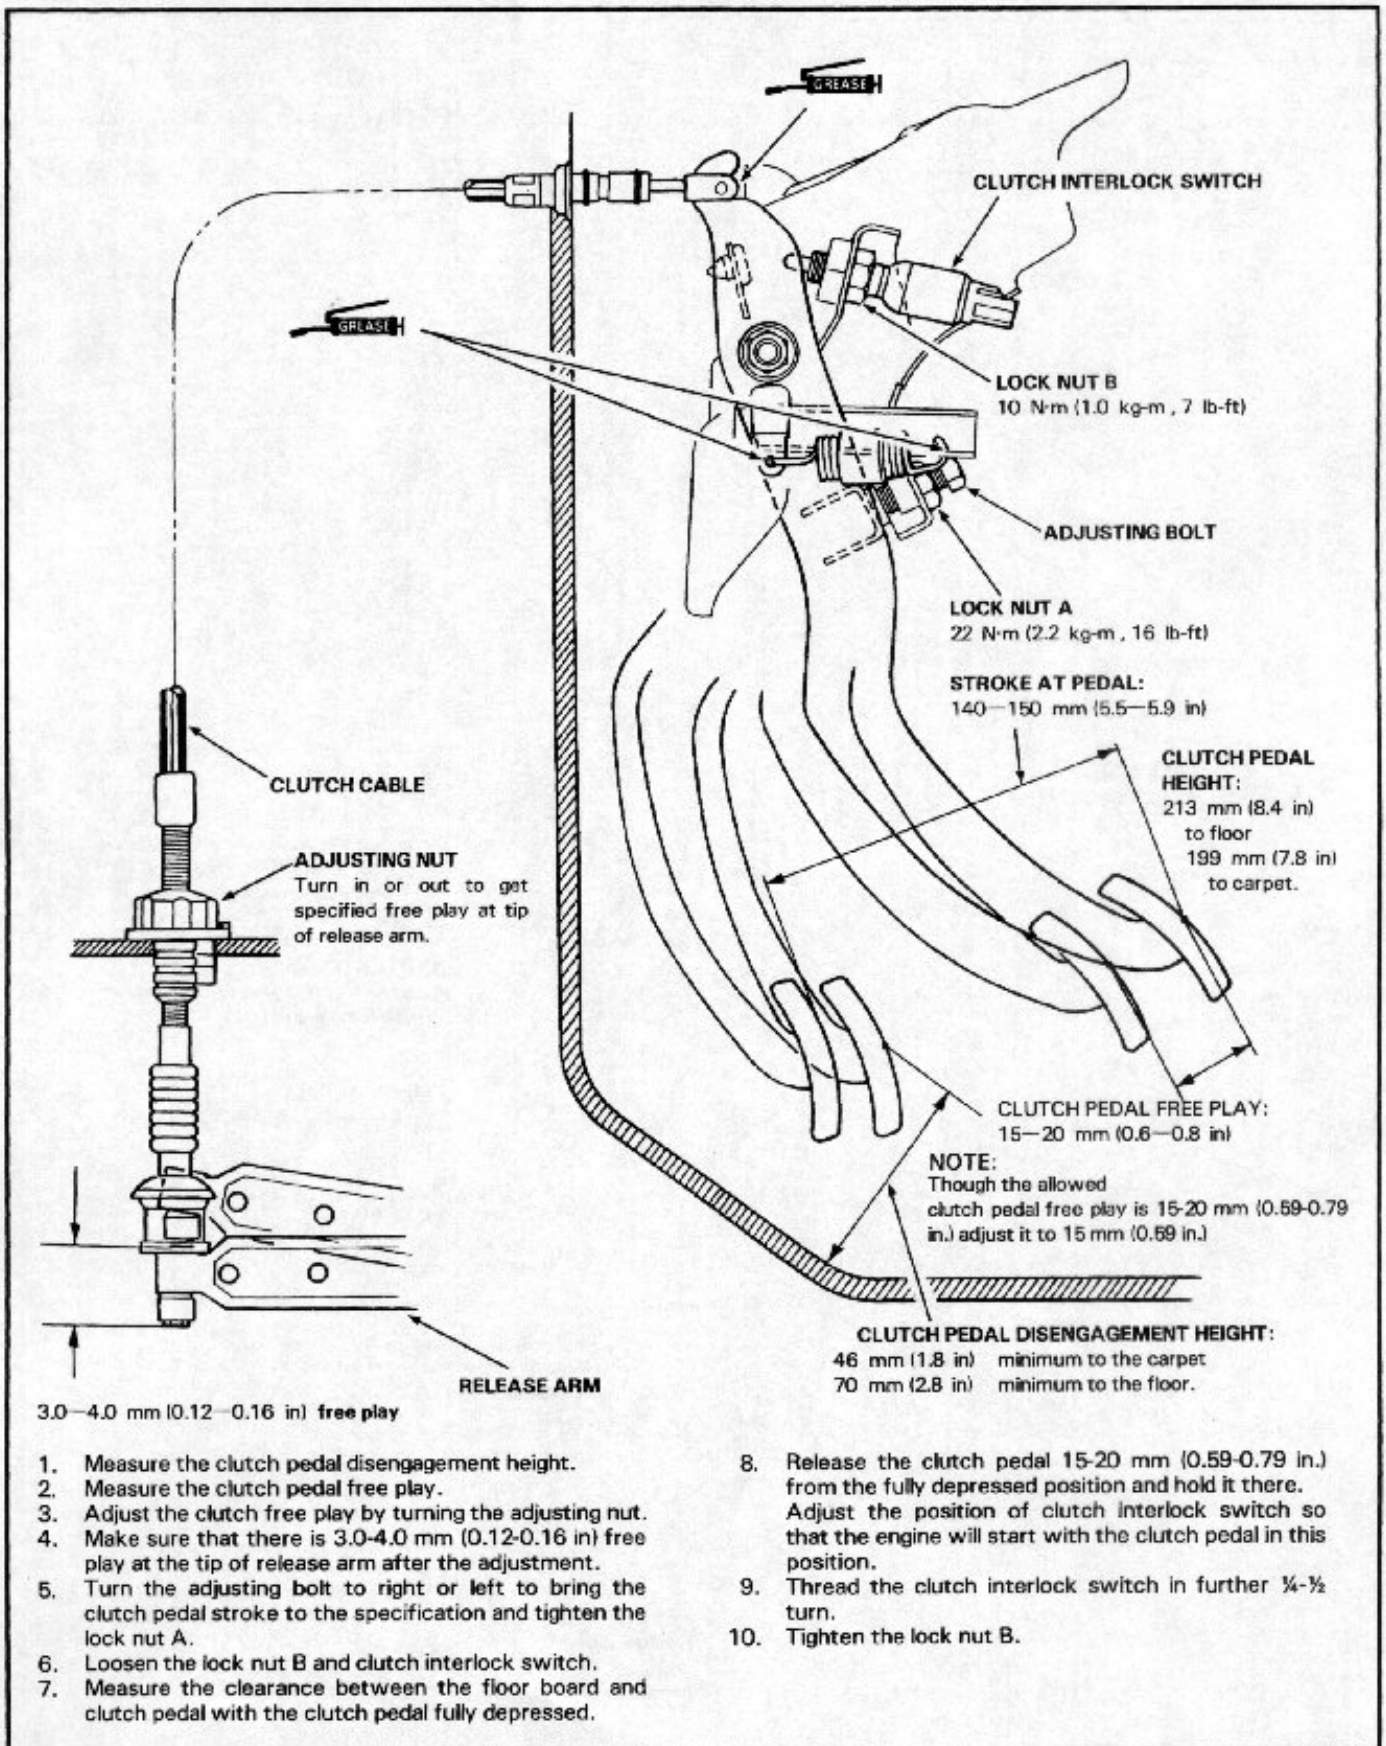

1. Measure the clutch pedal disengagement height.
2. Measure the clutch pedal free play.
3. Adjust the clutch free play by turning the adjusting nut.
4. Make sure that there is 3.0-4.0 mm (0.12-0.16 in) free play at the tip of release arm after the adjustment.
5. Turn the adjusting bolt to right or left to bring the clutch pedal stroke to the specification and tighten the lock nut A.
6. Loosen the lock nut B and clutch interlock switch.
7. Measure the clearance between the floor board and clutch pedal with the clutch pedal fully depressed.

8. Release the clutch pedal 15-20 mm (0.59-0.79 in.) from the fully depressed position and hold it there. Adjust the position of clutch interlock switch so that the engine will start with the clutch pedal in this position.
9. Thread the clutch interlock switch in further ¼-½ turn.
10. Tighten the lock nut B.