




Distributor Installation


1. Coat a new O-ring with engine oil, then install it.
2. Slip the distributor into position.

NOTE: The lugs on the end of the distributor and its mating grooves in the camshaft end are both offset to eliminate the possibility of installing the distributor 180° out of time.

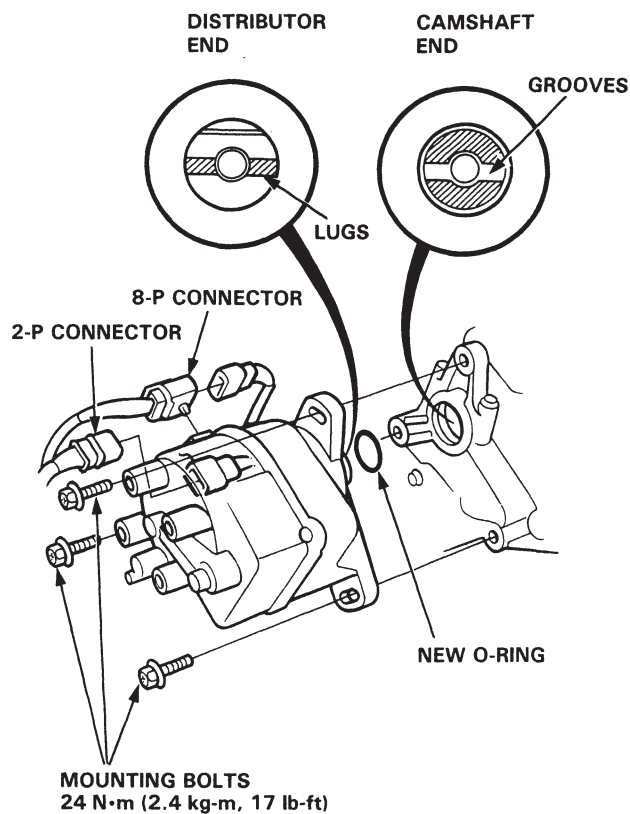

3. Install the mounting bolts and tighten them temporarily.
4. Connect the 2-P and 8-P connectors to the distributor.

5. Connect the plug wires as shown.

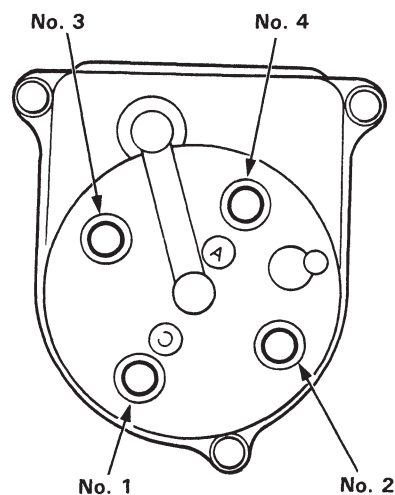

6. Set the timing with a timing light (see page 23-97).
7. After setting the timing, tighten the mounting bolts.